

# RUSTIC BARN STYLE PICTURE FRAMES BUILD PLANS



# TABLE OF CONTENTS

THANK YOU	3
CREDIT - INSPIRATION FOR FRAMES	4
PARTS LIST	5
CUT LIST	
STEP 1 – 4 LONG PIECES	6
STEP 2 - 6 SHORT PIECES	
STEP 3 – 2 HARDWOOD SUPPORT BOARDS	8
STEP 4 - BACKERBOARD	9
STEP 5 - CUTTING A RABBET IN THE SHORT PIECES	10
STEP 6 – TRIMMING THE LONG PIECES FOR THE PICTURE	11
STEP 6 - TRIMMING THE LONG PIECES FOR THE PICTURE - LARGE VIEW	16
STEP 7 - ROUTING OUT THE INLAY	13
STEP 7 - ROUTING OUT THE INLAY - LARGE VIEW	լւ
STAINING	
STEP 8 - DARK WALNUT	15
STEP 9 - CLASSIC GRAY	16
THE GLUE UP	
STEP 10 - GLUING WITH BRADS	17
STEP 11 – CLAMPING WITH CAUL BOARDS	18
STEP 12 – INSERTING POINTS AND INSTALLING THE WALL HANGER	19





## THANK YOU!

I WANTED TO TAKE A BRIEF MOMENT TO SIMPLY SAY <u>THANK YOU</u> FOR YOUR SUPPORT. IT TAKES A LOT OF WORK TO PLAN, CREATE, AND BUILD PROJECTS, AND EVEN MORE WORK TO CREATE THE VIDEOS AND PLANS TO SHARE WITH YOU. NONE OF IT WOULD BE POSSIBLE WITHOUT YOUR SUPPORT!

IF YOU HAVEN'T ALREADY, PLEASE CONSIDER SUBSCRIBING TO THE PSW YOUTUBE CHANNEL - AND PLEASE ALSO CONSIDER SHARING OUR POSTS AND VIDEOS WITH FRIENDS AND FAMILY THAT WOULD ENJOY THE CONTENT. PLEASE LEAVE US A COMMENT - AND LET US KNOW IF THERE'S SOMETHING SPECIFIC YOU'D LIKE TO SEE ON THE CHANNEL!

AS YOU WORK THROUGH THESE PLANS, PLEASE LET US KNOW IF YOU FIND AN ERROR - OR IF SOMETHING DOES NOT MAKE SENSE - SO THAT WE CAN HELP. SIMPLY USE THE EMAIL ADDRESS LISTED BELOW.

AGAIN, I SINCERELY CANNOT THANK YOU ENOUGH FOR THE SUPPORT. I HOPE YOU ENJOY THE CHANNEL, THE CONTENT, AND THESE PLANS.



WWW.YOUTUBE.COM/GPROBLEMEAWED



WWW.PROBLEMSAWED.COM




JUSTINGPROBLEMSAWED.COM







## **CREDIT – INSPIRATION FOR FRAMES**

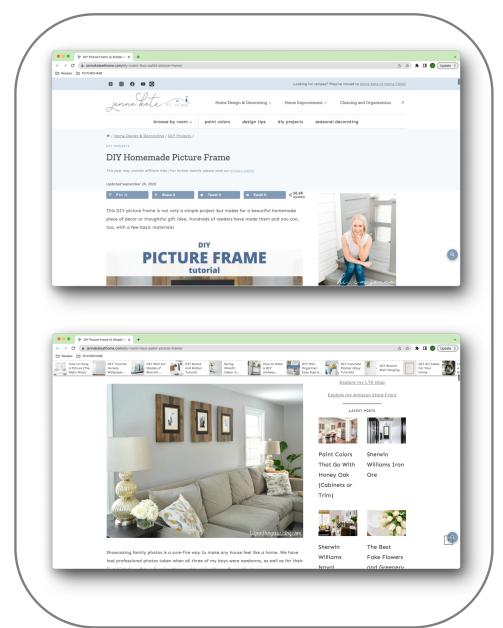

I FIRMLY BELIEVE IN GIVING CREDIT WHERE CREDIT IS DUE

WHEN LOOKING AT DIFFERENT PICTURE

FRAME STYLES ONLINE A COUPLE OF

YEARS AGO, I CAME ACROSS jenna kate AT HOME

ON HER WEBSITE, JENNA SHOWS HOW TO BUILD FRAMES USING SMALL WIDTH WOOD AND USING 2 DIFFERENT STAINS TO GIVE THE FRAMES A RUSTIC FEEL.

I TOOK HER IDEA AND AND CHANGED IT TO INCLUDE INSET GLASS – PLEASE CHECK HER WEBSITE OUT FOR MORE. GREAT

IDEAS: WWW.JENNAKATEATHOME.COM



## **PARTS LIST**

2-1"X 3"X 8" PINE BOARDS (WILL CUT)
PURCHASE AT YOUR LOCAL
HARDWARE STORE

2 – 2"X 16" HARDWOOD (CAN CUT TO SIZE)
PURCHASE AT YOUR LOCAL
HARDWARE STORE

1 – BRAD NAILS OR STAPLES
PURCHASE AT YOUR LOCAL
HARDWARE STORE

1 – WOOD GLUE AMAZON LINK

1 – CAN OF MINWAX DARK WALNUT STAIN <u>AMAZON LINK</u>

1 – CAN ON MINWAX CLASSIC GRAY STAIN <u>AMAZON LINK</u>

1 – POINT GUN OR PUSH POINTS

PUSH POINTS AMAZON LINK

POINT GUN AMAZON LINK

1 – FRAME WALL HANGER AMAZON LINK

### **ESTIMATED COST**

PART	PRICE
1"X3"X8'PINE WOOD	\$8.22
OAK HARDWOOD	\$8.69
BRAD NAILS - EST. COST	\$5.00
WOOD GLUE	\$19.80
DARK WALNUT STAIN - 8 OZ.	\$16. <i>77</i>
CLASSIC GRAY STAIN - 1 QT.	\$13.48
PUSH POINTS	\$2.48
ESTIMATED TOTAL:	\$ <i>7</i> 4.44

THE ESTIMATED TOTAL INCLUDES
GLUE, STAIN, AND PUSH POINTS IN
QUANTITIES GREATER THAN
NEEDED. EACH ADDITIONAL FRAME
WOULD ONLY COST APPROXIMATELY
\$17.00 TO BUILD.

\*prices subject to change


For a complete parts list with clickable links, visit: <a href="www.ProblemSawed.com/RusticFrames">www.ProblemSawed.com/RusticFrames</a>





STEP 1


CUT 4 PIECES OF 1"X3" AT A LENGTH OF 22" EACH. EACH PIECE SHOULD BE CUT AT A 90° ANGLE.

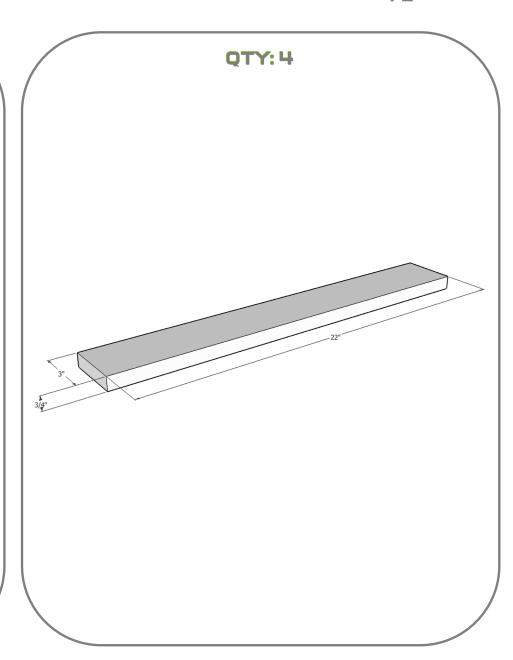



STEP 2


CUT 6 PIECES OF 1"X3" AT A LENGTH OF 43/4" EACH. EACH PIECE SHOULD BE CUT AT A 90° ANGLE.

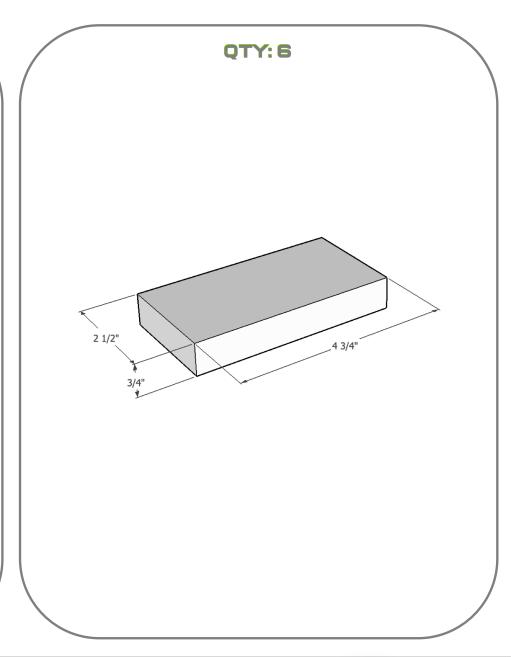



STEP 3


CUT 2 PIECES OF THE OAK (OR SIMILAR)
HARDWOOD AT A LENGTH OF 16" EACH.
EACH PIECE SHOULD BE CUT AT A 90°
ANGLE.

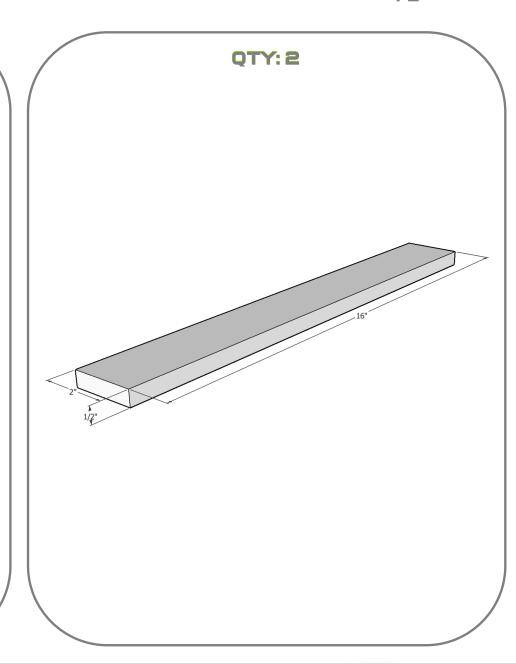



STEP 4

USING THE ¼"BACKERBOARD, CUT A
RECTANGLE TO THE FOLLOWING SIZE:

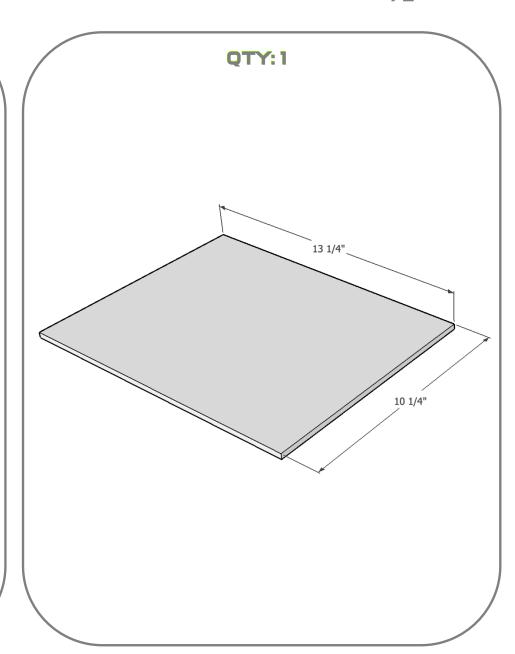




STEP 5

USING A ROUTER, DADO STACK WITH YOUR

TABLE SAW, OR HAND SAWS – REMOVE A

½" SQUARE FROM ONE END OF THE

SMALL STYLE PIECES.

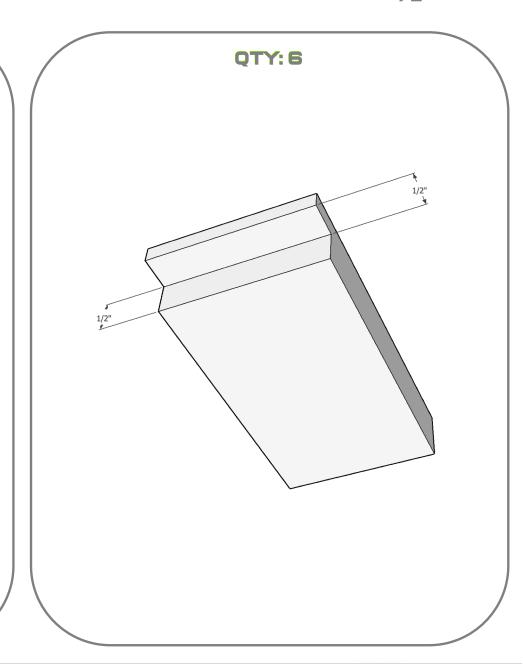




STEP 6


SELECT 2 OF THE PIECES OF WOOD CUT IN STEP 1.

USING A JIGSAW, REMOVE A 1"X 12 ½"
SECTION OF WOOD FROM A LONG EDGE.

THIS SECTION SHOULD BE CENTERED
4 3/4" FROM EACH EDGE.

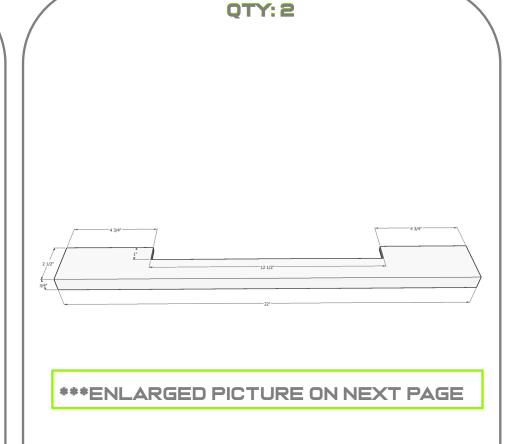



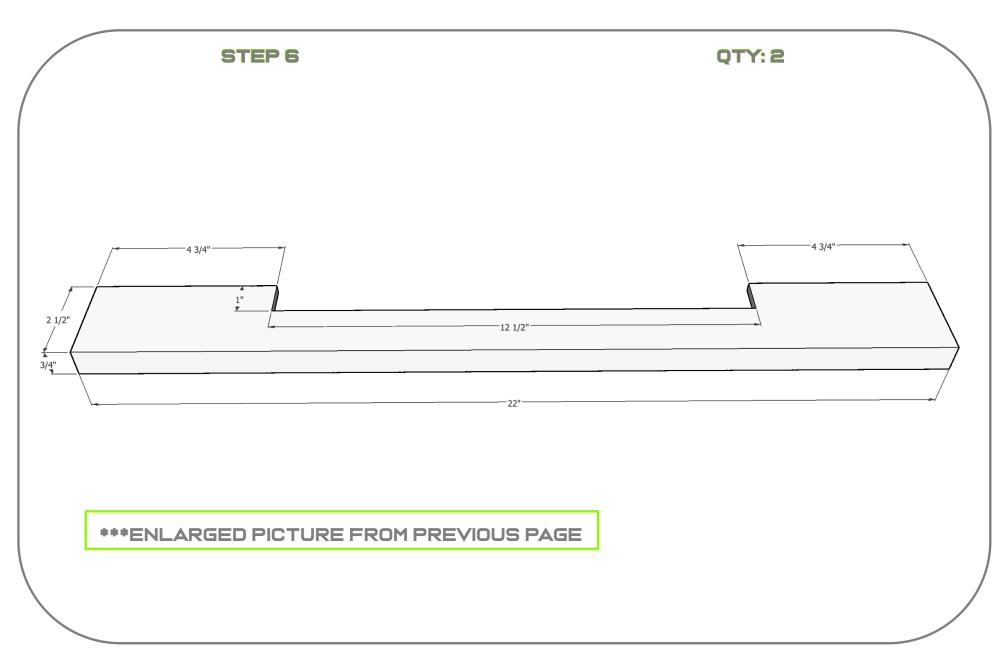






#### STEP 7

USING A ROUTER, ROUTE AN "INLAY"
SECTION OF THE WOOD TO ALLOW THE
PICTURE AND GLASS TO SET INSIDE THE
FRAME.


THE ROUTE SHOULD BE ½" DEEP BY ½"
WIDE. YOU MAY NEED TO USE A CHISEL TO
SQUARE THE CORNERS.



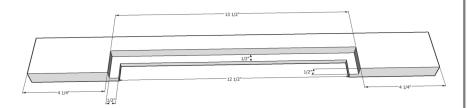

\*\*\*ENLARGED PICTURE ON NEXT PAGE



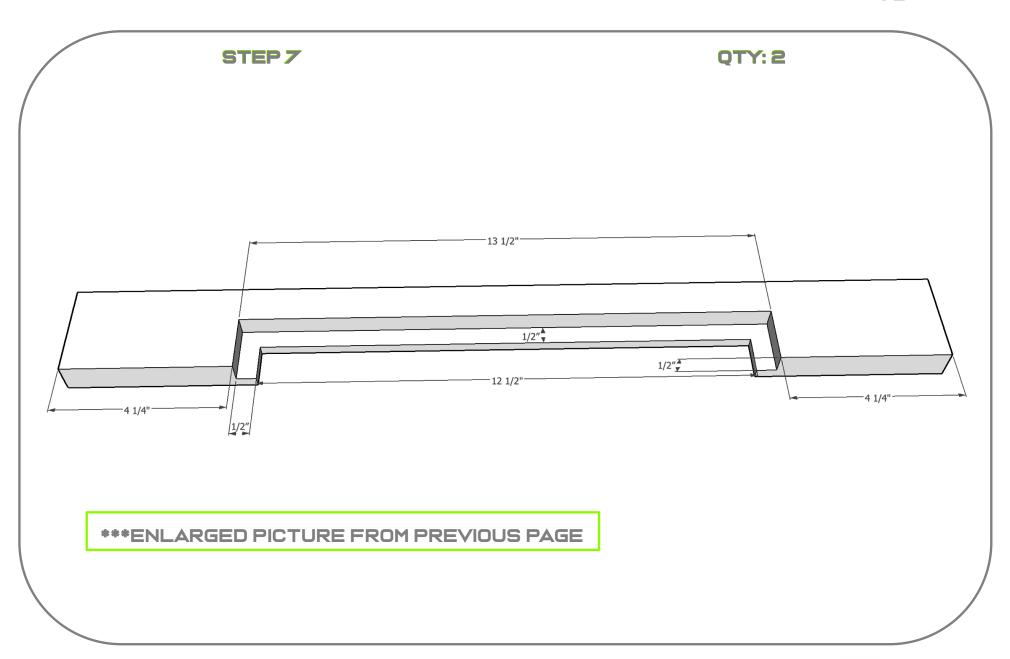





## STAINING - BASED ON FRAME SIZE OF 22"X 171/2"


#### STEP 8

BEGINNING WITH THE DARK WALNUT
STAIN, STAIN EACH OF THE PIECES. THEN,
IMMEDIATELY WIPE THE STAIN OFF SOME
PIECES, WHILE LEAVING THE STAIN ON
OTHERS LONGER.

\*\*\*NOTE - MAKE SURE YOU STAIN THE
SHORTER PIECES IN PAIRS - LEAVING THE
STAIN ON THE PAIRS OF WOOD
CONSISTENTLY AND WIPING THE STAIN
OFF AT THE SAME TIME. SEE IMAGE.



\*\*\*NOTE - MAKE SURE YOU STAIN THE SHORTER PIECES IN PAIRS.

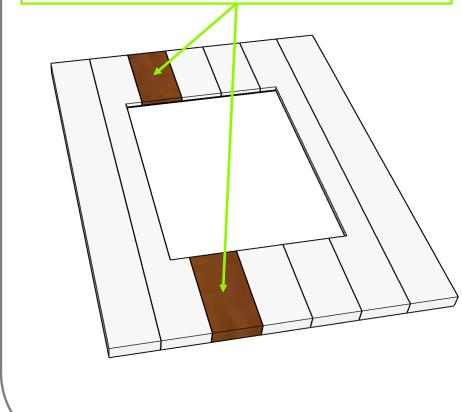



## STAINING - BASED ON FRAME SIZE OF 22"X 171/2"


#### STEP 8

ONCE YOU ARE FINISHED STAINING THE
WOOD PIECES WITH DARK WALNUT, BEGIN
STAINING THE PIECES USING THE
CLASSIC GRAY STAIN.

\*\*\*NOTE - MAKE SURE YOU STAIN THE
SHORTER PIECES IN PAIRS - LEAVING THE
STAIN ON THE PAIRS OF WOOD
CONSISTENTLY AND WIPING THE STAIN
OFF AT THE SAME TIME. SEE IMAGE.



\*\*\*NOTE - MAKE SURE YOU STAIN THE SHORTER PIECES IN PAIRS.

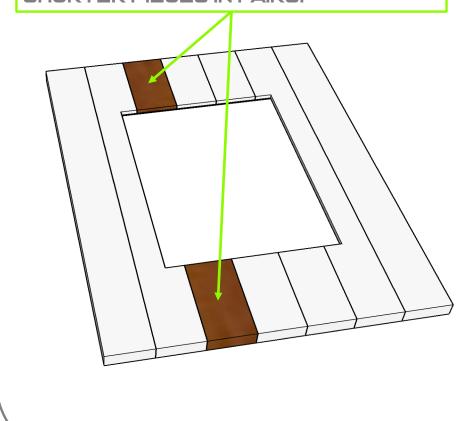



## THE GLUE UP-BASED ON FRAME SIZE OF 22"X 171/2"

#### STEP 10

ONCE ALL THE STAIN IS DRY AND YOUR
ARE SATISFIED WITH THE LOOK OF THE
WOOD, PUT THE PIECES OF WOOD FACE
DOWN ON A TABLE. THEN, COVER ONE
SIDE OF THE HARDWOOD WITH WOOD GLUE,
AND PLACE IT ON THE BACK OF THE TOP
AND BOTTOM OF THE FRAME (SEE IMAGE).

\*\*\*YOU SHOULD NOT GLUE THE SIDES OF THE INDIVIDUAL BOARDS. THIS GLUE WILL NOT WORK DUE TO THE STAIN, IT WILL SEEP OUT, AND YOU DO NOT WANT THE BOARDS TO BE "PERFECTLY" ALIGNED.

TO ENSURE THE FRAME IS GLUED
PROPERLY, YOU SHOULD ALSO BRAD
NAIL/STAPLE THE HARDWOOD IN PLACE.

ONLY GLUE THE CUT FRAME TO THESE BACK SUPPORT BOARDS




## THE GLUE UP-BASED ON FRAME SIZE OF 22"X 171/2"

#### STEP 11

IF YOU HAVE WOOD CLAMPS, USE SOME
CAUL BOARDS AND CLAMP THE
HARDWOOD PIECES DOWN TO ENSURE THE
FRAME DOES NOT BEND WHILE THE GLUE
SETS. (SEE IMAGE)

LET THE GLUE FULLY CURE FOR 48 HOURS.

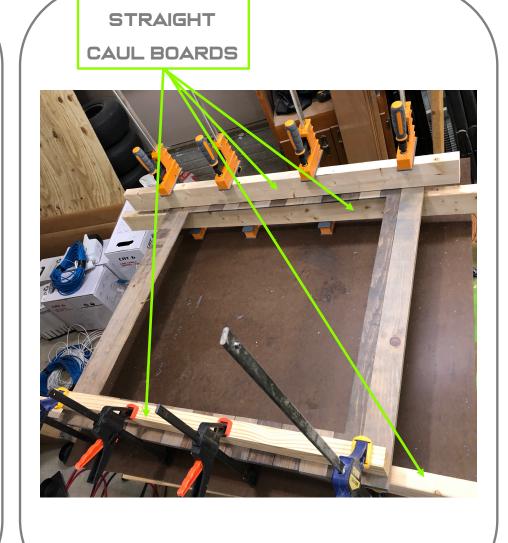



# THE GLUE UP-BASED ON FRAME SIZE OF 22"X 171/2"

#### **STEP 12**

ONCE THE GLUE HAS CURED, INSERT
YOUR GLASS, YOUR PICTURE, AND THEN
YOUR BACKERBOARD CUT IN STEP 4.

THEN, EITHER USING YOUR POINT GUN OR PUSH POINTS, SECURE THE ITEMS INSERTED AROUND THE FRAME. INSERT AT LEAST 2 POINTS ON EACH SIDE OF THE FRAME.

THEN, MEASURE TO CENTER AND INSTALL YOUR WALL HANGER ON THE HARDWOOD SUPPORT BOARD, AND YOU'RE ALL FINISHED!

